

SYMBOL	COMPONENT
KM1	Compressor contactor
KM2	Water pump contactor
KM3	Fan contactor
FR1	Compressor thermal overload relay
FR2	Water pump thermal overload relay
FR3	Blower thermal overload relay
M1	Compressor
M2	Water pump
M3	Fan
APR	Reverse-phase relay
SB1	Pump on & off switch
SB2	Run on & off switch
TP	Temperature Controller
Pt100	Thermal sensor RT
HL1	Power source
HL2	Over load-pump
HL3	Overload-compressor
HL4	Over high-pressure
HL5	Over low-pressure
HL6	Phase reverse
HL7	Error
Buzzer	Buzzer
HPS	High pressure switch
LPS	Low pressure switch
KA1, KA2	Auxiliary relay